




Easy set-up guide

u-mee fibre router

Your services will be configured during the connection period i.e. within ONE business day of you having collected your u-mee equipment, please connect as shown below


Step 1

Connect the black power supply cable to the router 'PWR' socket.
DON'T SWITCH THE ROUTER ON YET!

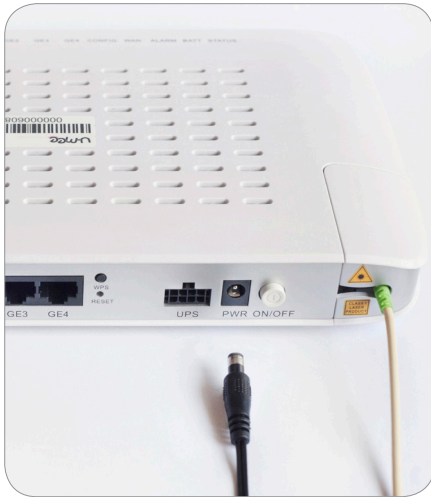

Step 2

Connect the fibre cable **C from your router to your u-mee wall box** (remove BOTH **S** safety caps first)

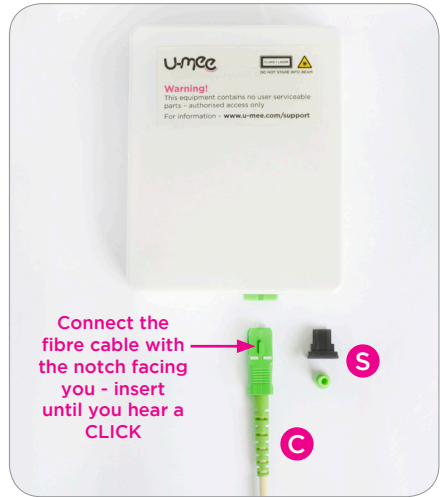

Step 3

Warning: DO NOT LOOK directly into the fibre socket to avoid eye injury/damage

NOW - switch the router ON

The router will connect to the u-mee servers for the first time - don't disconnect/turn off the router.

The lights on router should turn GREEN

If the lights turn and remain RED through the connection period i.e. ONE business day connection period please contact us: Tel: 22220000 (Mon-Fri / 9:00am - 6:30pm) OR www.u-mee.com/contact

u-mee WI-FI set up

SSID (name): u-mee

Security key:

Check list

